 


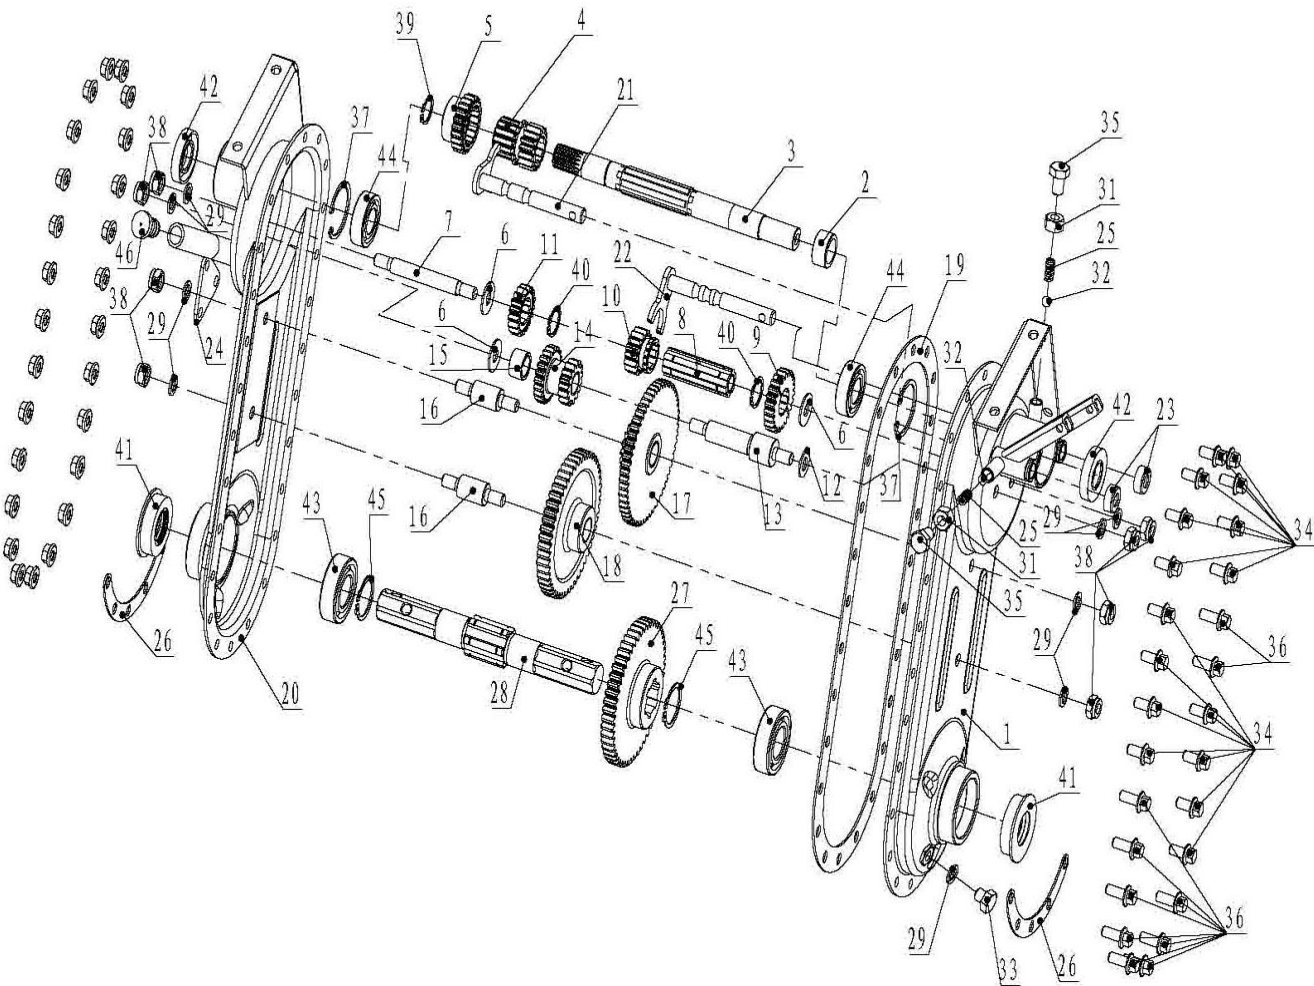

| PAG | POS | REFERNCIAS     | DESCRIPCION                                    | CANT |
|-----|-----|----------------|------------------------------------------------|------|
| P1  | 1   | DRTL3321/P1/1  | CARACA TRANS. TRACC. IZQ DUCATI DRTL2100       | 1    |
| P1  | 2   | DRTL3321/P1/2  | CASQUILLO EJE DUCATI DRTL2100                  | 1    |
| P1  | 3   | DRTL3321/P1/3  | EJE SUPERIOR TRACCION DUCATI DRTL2100          | 1    |
| P1  | 4   | DRTL3321/P1/4  | PIÑON CORTAS DUCATI DRTL2100                   | 1    |
| P1  | 5   | DRTL3321/P1/5  | PIÑON LARGAS DUCATI DRTL2100                   | 1    |
| P1  | 6   | DRTL3321/P1/6  | ARANDELA AJUSTE DUCATI DRTL2100                | 3    |
| P1  | 7   | DRTL3321/P1/7  | EJE CAMBIO DUCATI DRTL2100                     | 1    |
| P1  | 8   | DRTL3321/P1/8  | EJE ESTRIADO DUCATI DRTL2100                   | 1    |
| P1  | 9   | DRTL3321/P1/9  | EJE MARCHA CORTA DUCATI DRTL2100               | 1    |
| P1  | 10  | DRTL3321/P1/10 | PIÑON CAMBIO DUCATI DRTL2100                   | 1    |
| P1  | 11  | DRTL3321/P1/11 | EJE MARCHA LARGA DUCATI DRTL2100               | 1    |
| P1  | 12  | DRTL3321/P1/12 | ARANDELA AJUSTE DUCATI DRTL2100                | 1    |
| P1  | 13  | DRTL3321/P1/13 | EJE REVERSA DUCATI DRTL2100                    | 1    |
| P1  | 14  | DRTL3321/P1/14 | PIÑON DOBLE DUCATI DRTL2100                    | 1    |
| P1  | 15  | DRTL3321/P1/15 | CASQUILLO PIÑON DOBLE DUCATI DRTL2100          | 1    |
| P1  | 16  | DRTL3321/P1/16 | EJE INTERMEDIO DUCATI DRTL2100                 | 2    |
| P1  | 17  | DRTL3321/P1/17 | PIÑON TRANSMISION DUCATI DRTL2100              | 1    |
| P1  | 18  | DRTL3321/P1/18 | ENGRANAJE TRANSMISION DUCATI DRTL2100          | 1    |
| P1  | 19  | DRTL3321/P1/19 | JUNTA CARACA DUCATI DRTL2100                   | 1    |
| P1  | 20  | DRTL3321/P1/20 | CARACA TRANS. TRACC DRCH DUCATI DRTL2100       | 1    |
| P1  | 21  | DRTL3321/P1/21 | EJE CAMBIO C/L DUCATI DRTL2100                 | 1    |
| P1  | 22  | DRTL3321/P1/22 | EJE CAMBIO DIRECCION DUCATI DRTL2100           | 1    |
| P1  | 23  | DRTL3321/P1/23 | RETEN DUCATI DRTL2100                          | 2    |
| P1  | 24  | DRTL3321/P1/24 | PLACA TRIANGULAR DUCATI DRTL2100               | 1    |
| P1  | 25  | DRTL3321/P1/25 | RESORTE BOLA DUCATI DRTL2100                   | 2    |
| P1  | 26  | DRTL3321/P1/26 | REFUERZO INFERIOR DUCATI DRTL2100              | 2    |
| P1  | 27  | DRTL3321/P1/27 | PIÑON EJE SALIDA TRACCION DUCATI DRTL2100      | 1    |
| P1  | 28  | DRTL3321/P1/28 | EJE SALIDA TRACCION DUCATI DRTL2100            | 1    |
| P1  | 29  | DRTL3321/P1/29 | ARANDELA TAPON VACIADO TRACC DUCATI DRTL2100   | 9    |
| P1  | 30  | DRTL3321/P1/30 | TUERCA M8 DUCATI DRTL2100                      | 26   |
| P1  | 31  | DRTL3321/P1/31 | TUERCA M10 DUCATI DRTL2100                     | 2    |
| P1  | 32  | DRTL3321/P1/32 | BOLA ACERO DUCATI DRTL2100                     | 2    |
| P1  | 33  | DRTL3321/P1/33 | TORNILLO M10*10 DUCATI DRTL2100                | 1    |
| P1  | 34  | DRTL3321/P1/34 | TORNILLO M8*16 DUCATI DRTL2100                 | 16   |
| P1  | 35  | DRTL3321/P1/35 | TORNILLO M10*16 DUCATI DRTL2100                | 2    |
| P1  | 36  | DRTL3321/P1/36 | TORNILLO M8*20 DUCATI DRTL2100                 | 10   |
| P1  | 37  | DRTL3321/P1/37 | GRUPILLA 42 DUCATI DRTL2100                    | 2    |
| P1  | 38  | DRTL3321/P1/38 | TUERCA M10 DUCATI DRTL2100                     | 8    |
| P1  | 39  | DRTL3321/P1/39 | GRUPILLA 20 DUCATI DRTL2100                    | 1    |
| P1  | 40  | DRTL3321/P1/40 | CLIP 22 DUCATI DRTL2100                        | 2    |
| P1  | 41  | DRTL3321/P1/41 | RETEN EJE SALIDA DRCH TRACCION DUCATI DRTL2100 | 2    |
| P1  | 42  | DRTL3321/P1/42 | RETEN EJE SUPERIOR TRACCION DUCATI DRTL2100    | 2    |
| P1  | 43  | DRTL3321/P1/43 | RODAMIENTO 6205 DUCATI DRTL2100                | 2    |
| P1  | 44  | DRTL3321/P1/44 | RODAMIENTO 6004 DUCATI DRTL2100                | 2    |
| P1  | 45  | DRTL3321/P1/45 | GRUPILLA 32 DUCATI DRTL2100                    | 2    |
| P1  | 46  | DRTL3321/P1/46 | TAPON LLENADO ACEITE DUCATI DRTL2100           | 1    |






## MOTOCULTOR DUCATI DRTL2100 REF: DRTL3321


 
P2

| PAG | POS | REFERENCIAS    | DESCRIPCION                                            | CANT |
|-----|-----|----------------|--------------------------------------------------------|------|
| P2  | 1   | DRTL3321/P2/1  | CARCASA TRANSMISION FRESAS IZQ DUCATI DRTL2100         | 1    |
| P2  | 2   | DRTL3321/P2/2  | EJE SALIDA FRESAS DUCATI DRTL2100                      | 1    |
| P2  | 3   | DRTL3321/P2/3  | PIÑON CADENA SALIDA DUCATI DRTL2100                    | 1    |
| P2  | 4   | DRTL3321/P2/4  | EJE INTERMEDIO DUCATI DRTL2100                         | 1    |
| P2  | 5   | DRTL3321/P2/5  | PIÑON DOBLE DUCATI DRTL2100                            | 1    |
| P2  | 6   | DRTL3321/P2/6  | EJE SUPERIOR DUCATI DRTL2100                           | 1    |
| P2  | 7   | DRTL3321/P2/7  | PIÑON CAMBIO DUCATI DRTL2100                           | 1    |
| P2  | 8   | DRTL3321/P2/8  | PIÑON CAMBIO DIRECCION DUCATI DRTL2100                 | 1    |
| P2  | 9   | DRTL3321/P2/9  | CASQUILLO DUCATI DRTL2100                              | 1    |
| P2  | 10  | DRTL3321/P2/10 | HORQUILLA CAMBIO DUCATI DRTL2100                       | 1    |
| P2  | 11  | DRTL3321/P2/11 | JUNTA CARCASA TRANSMISION FRESAS DUCATI DRTL2100       | 1    |
| P2  | 12  | DRTL3321/P2/12 | CARCASA TRANSMISION FRESAS DRCH DUCATI DRTL2100        | 1    |
| P2  | 13  | DRTL3321/P2/13 | FLEJE TENSOR CADENA DUCATI DRTL2100                    | 1    |
| P2  | 14  | DRTL3321/P2/14 | ARANDELA AJUSTE DUCATI DRTL2100                        | 1    |
| P2  | 15  | DRTL3321/P2/15 | REFUERZO TRANSMISION FRESA DUCATI DRTL2100             | 2    |
| P2  | 16  | DRTL3321/P2/16 | PLACA TRIANGULAR DUCATI DRTL2100                       | 1    |
| P2  | 17  | DRTL3321/P2/17 | TAPON RETEN DUCATI DRTL2100                            | 1    |
| P2  | 18  | DRTL3321/P2/18 | RESORTE BOLA CAMBIO DUCATI DRTL2100                    | 1    |
| P2  | 19  | DRTL3321/P2/19 | RETEN EJE CAMBIO DUCATI DRTL2100                       | 1    |
| P2  | 20  | DRTL3321/P2/20 | BARRA DUCATI DRTL2100                                  | 2    |
| P2  | 21  | DRTL3321/P2/21 | ARANDELA TAPON VACIADO CARCASA FRESA DUCATI DRTL2100   | 3    |
| P2  | 22  | DRTL3321/P2/22 | RETEN DUCATI DRTL2100                                  | 1    |
| P2  | 23  | DRTL3321/P2/23 | RETEN EJE SALIDA FRESAS DUCATI DRTL2100                | 2    |
| P2  | 24  | DRTL3321/P2/24 | TUERCA M10 DUCATI DRTL2100                             | 1    |
| P2  | 25  | DRTL3321/P2/25 | BOLA ACERO DUCATI DRTL2100                             | 1    |
| P2  | 26  | DRTL3321/P2/26 | TORNILLO M10*10 DUCATI DRTL2100                        | 1    |
| P2  | 27  | DRTL3321/P2/27 | TORNILLO M10*16 DUCATI DRTL2100                        | 1    |
| P2  | 28  | DRTL3321/P2/28 | GRUPILLA 32 DUCATI DRTL2100                            | 2    |
| P2  | 29  | DRTL3321/P2/29 | CLIP 42 DUCATI DRTL2100                                | 2    |
| P2  | 30  | DRTL3321/P2/30 | RODAMIENTO 6004 DUCATI DRTL2100                        | 2    |
| P2  | 31  | DRTL3321/P2/31 | RODAMIENTO 6205 DUCATI DRTL2100                        | 2    |
| P2  | 32  | DRTL3321/P2/32 | TUERCA M10 DUCATI DRTL2100                             | 2    |
| P2  | 33  | DRTL3321/P2/33 | TUERCA M8 DUCATI DRTL2100                              | 28   |
| P2  | 34  | DRTL3321/P2/34 | TORNILLO M8*16 DUCATI DRTL2100                         | 12   |
| P2  | 35  | DRTL3321/P2/35 | TORNILLO M8/20 DUCATI DRTL2100                         | 9    |
| P2  | 36  | DRTL3321/P2/36 | TORNILLO M8*25 DUCATI DRTL2100                         | 5    |
| P2  | 37  | DRTL3321/P2/37 | TAPON LLENADO ACEITE TRANSMISION FRESA DUCATI DRTL2100 | 1    |
| P2  | 38  | DRTL3321/P2/38 | PLACA CUADRADA DUCATI DRTL2100                         | 2    |
| P2  | 39  | DRTL3321/P2/39 | CADENA TRANSMISION DUCATI DRTL2100                     | 1    |

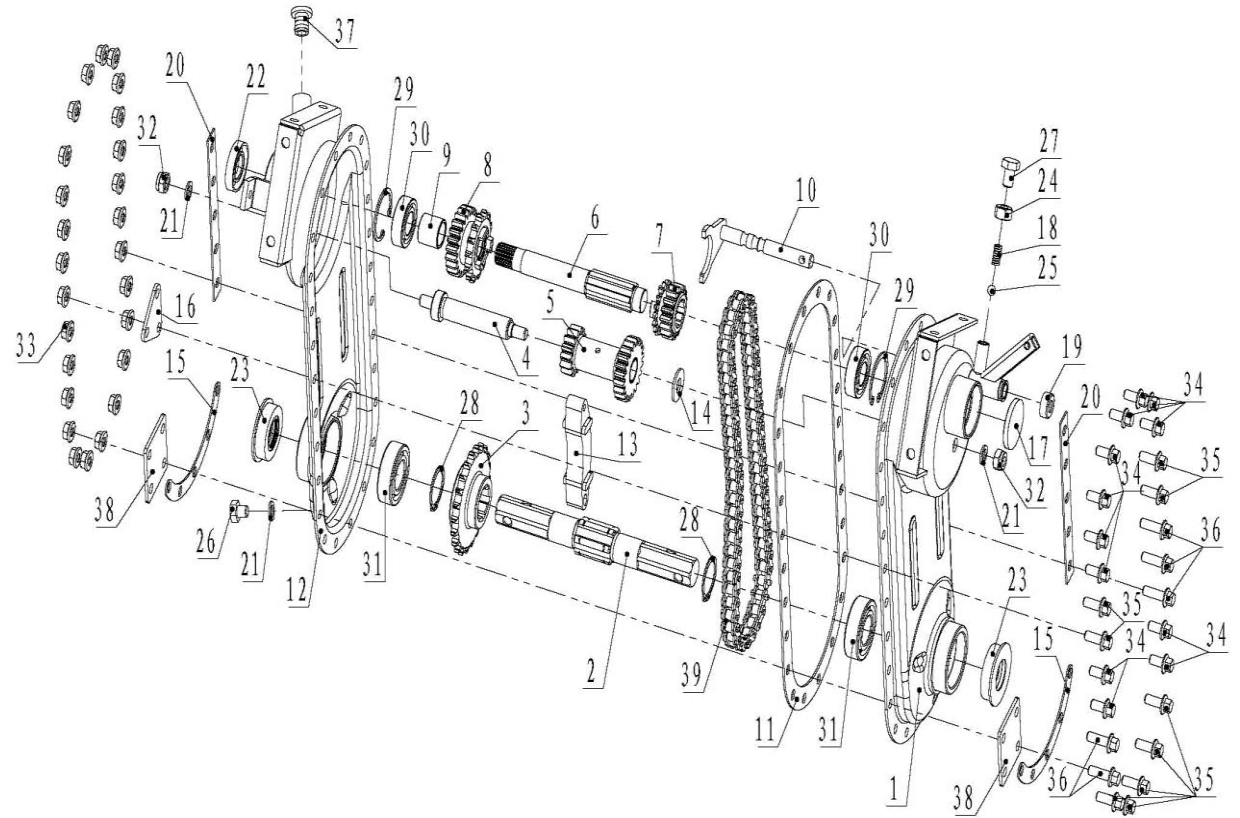



P3

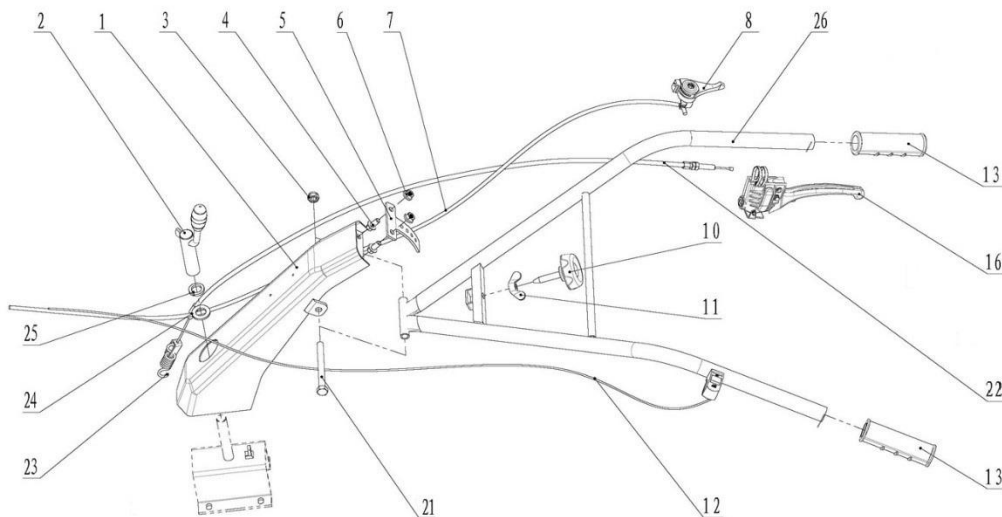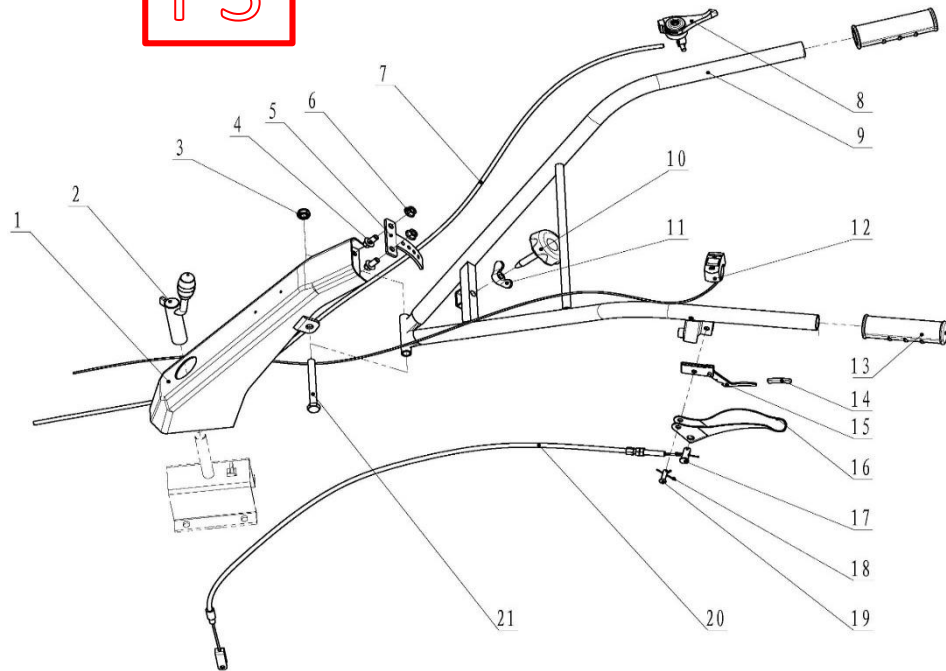  

## MOTOCULTOR DUCATI DRTL2100 REF: DRTL3321

 
ATENCIÓN, 2 VERSIONES DE MANILLAR

| PAG | POS | REFERENCIAS     | DESCRIPCION                                    | CANT |
|-----|-----|-----------------|------------------------------------------------|------|
| P3  | 1   | DRTL3321/P3/1   | MANILLAR INFERIOR DUCATI DRTL2100              | 1    |
| P3  | 2   | DRTL3321/P3/2   | POMO APRIETE MANILLAR INFERIOR DUCATI DRTL2100 | 1    |
| P3  | 3   | DRTL3321/P3/3   | TUERCA M10 DUCATI DRTL2100                     | 1    |
| P3  | 4   | DRTL3321/P3/4   | TORNILLO M8*16 DUCATI DRTL2100                 | 2    |
| P3  | 5   | DRTL3321/P3/5   | PLACA LIMITE DUCATI DRTL2100                   | 1    |
| P3  | 6   | DRTL3321/P3/6   | TUERCA M8 DUCATI DRTL2100                      | 2    |
| P3  | 7   | DRTL3321/P3/7   | CABLE ACELERADOR DUCATI DRTL2100               | 1    |
| P3  | 8   | DRTL3321/P3/8   | MANDO ACELERADOR DUCATI DRTL2100               | 1    |
| P3  | 9   | DRTL3321/P3/9   | MANILLAR SUPERIOR DUCATI DRTL2100              | 1    |
| P3  | 10  | DRTL3321/P3/10  | POMO AJUSTE MANILLAR SUPERIOR DUCATI DRTL2100  | 1    |
| P3  | 11  | DRTL3321/P3/11  | TUERCA PALOMILLA M10 DUCATI DRTL2100           | 1    |
| P3  | 12  | DRTL3321/P3/12  | INTERRUPTOR ON/OFF DUCATI DRTL2100             | 1    |
| P3  | 13  | DRTL3321/P3/13  | EMPUÑADURA MANILLAR DUCATI DRTL2100            | 2    |
| P3  | 14  | DRTL3321/P3/14  | GOMA SEGURO DUCATI DRTL2100                    | 1    |
| P3  | 15  | DRTL3321/P3/15  | SEGURO COMPLETO DUCATI DRTL2100                | 1    |
| P3  | 16  | DRTL3321/P3/16  | MANETA EMBRAGUE DUCATI DRTL2100                | 1    |
| P3  | 16  | DRTL3321/P3/162 | MANETA EMBRAGUE v2 DUCATI DRTL2100             | 1    |
| P3  | 17  | DRTL3321/P3/17  | PRISIONERO CABLE DUCATI DRTL2100               | 1    |
| P3  | 18  | DRTL3321/P3/18  | PIN 1,6*25 DUCATI DRTL2100                     | 2    |
| P3  | 19  | DRTL3321/P3/19  | PIN 6*22 DUCATI DRTL2100                       | 1    |
| P3  | 20  | DRTL3321/P3/20  | CABLE EMBRAGUE DUCATI DRTL2100                 | 1    |
| P3  | 21  | DRTL3321/P3/21  | TORNILLO M10*100 DUCATI DRTL2100               | 1    |
| P3  | 22  | DRTL3321/P3/22  | CABLE EMBRAGUE V.2 DUCATI DRTL2100             | 1    |
| P3  | 23  | DRTL3321/P3/23  | MUELLE CABLE EMBRAGUE V.2 DUCATI DRTL2100      | 1    |
| P3  | 24  | DRTL3321/P3/24  | ARANDELA ELASTICA 16 DUCATI DRTL2100           | 1    |
| P3  | 25  | DRTL3321/P3/25  | ARANDELA ANCHA 16 DUCATI DRTL2100              | 1    |
| P3  | 26  | DRTL3321/P3/26  | MANILLAR SUPERIOR DUCATI DRTL2100              | 1    |




MOTOCULTOR DUCATI DRTL2100 REF: DRTL3321

P4

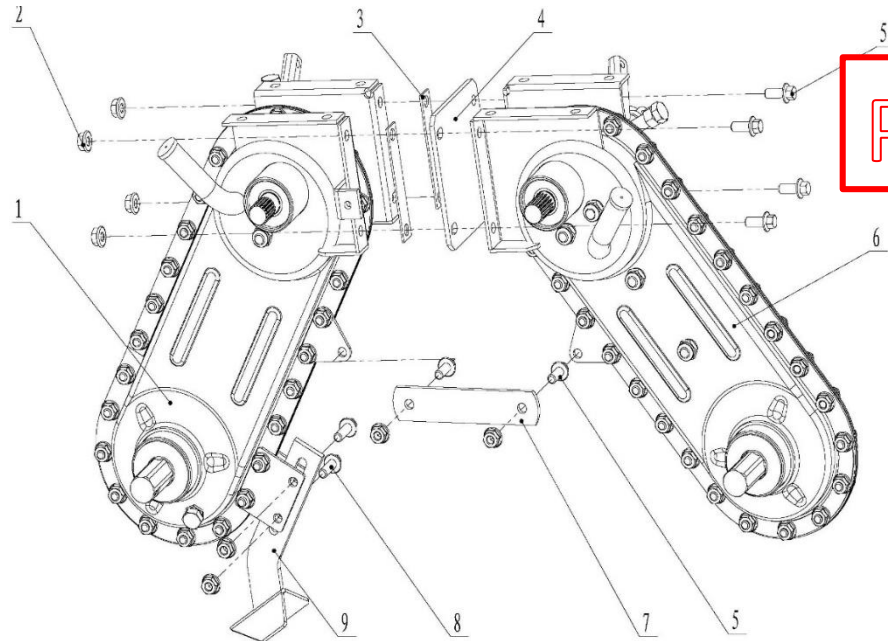

P5

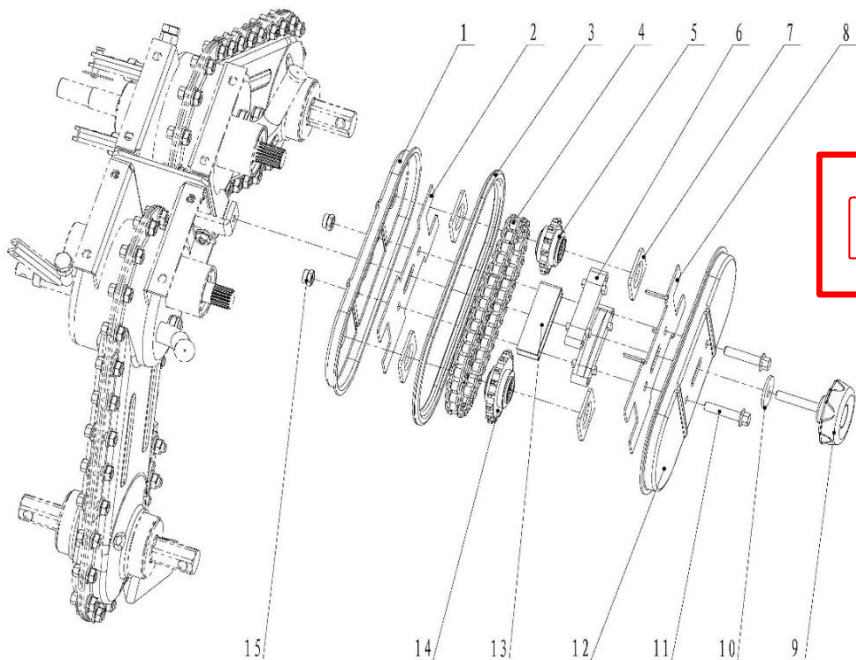 


| PAG | POS | REFERENCIAS    | DESCRIPCION                                   | CANT |
|-----|-----|----------------|-----------------------------------------------|------|
| P4  | 1   | DRTL3321/P4/1  | TRANSMISION FRESAS COMPLETA DUCATI DRTL2100   | 1    |
| P4  | 2   | DRTL3321/P4/2  | TUERCA M8 DUCATI DRTL2100                     | 8    |
| P4  | 3   | DRTL3321/P4/3  | BARRA UNION DUCATI DRTL2100                   | 2    |
| P4  | 4   | DRTL3321/P4/4  | PLACA UNION DUCATI DRTL2100                   | 1    |
| P4  | 5   | DRTL3321/P4/5  | TORNILLO M8*20 DUCATI DRTL2100                | 6    |
| P4  | 6   | DRTL3321/P4/6  | TRANSMISION TRACCION COMPLETA DUCATI DRTL2100 | 1    |
| P4  | 7   | DRTL3321/P4/7  | PLACA UNION INFERIOR DUCATI DRTL2100          | 1    |
| P4  | 8   | DRTL3321/P4/8  | TORNILLO M8*25 DUCATI DRTL2100                | 2    |
| P4  | 9   | DRTL3321/P4/9  | ESPUELA REGULABLE DUCATI DRTL2100             | 1    |
| PAG | POS | REFERENCIAS    | DESCRIPCION                                   | CANT |
| P5  | 1   | DRTL3321/P5/1  | TAPA IZQ DUCATI DRTL2100                      | 1    |
| P5  | 2   | DRTL3321/P5/2  | CHAPA SOPORTE 2 DUCATI DRTL2100               | 1    |
| P5  | 3   | DRTL3321/P5/3  | JUNTA TAPA CADENA DUCATI DRTL2100             | 1    |
| P5  | 4   | DRTL3321/P5/4  | CADENA DUCATI DRTL2100                        | 1    |
| P5  | 5   | DRTL3321/P5/5  | PIÑON CADENA DUCATI DRTL2100                  | 1    |
| P5  | 6   | DRTL3321/P5/6  | FLEJE TENSOR DUCATI DRTL2100                  | 2    |
| P5  | 7   | DRTL3321/P5/7  | CHAPA AJUSTE DUCATI DRTL2100                  | 4    |
| P5  | 8   | DRTL3321/P5/8  | CHAPA SOPORTE 1 DUCATI DRTL2100               | 1    |
| P5  | 9   | DRTL3321/P5/9  | POMO TAPA DUCATI DRTL2100                     | 1    |
| P5  | 10  | DRTL3321/P5/10 | ARANDELA DUCATI DRTL2100                      | 1    |
| P5  | 11  | DRTL3321/P5/11 | TORNILLO M8*40 DUCATI DRTL2100                | 2    |
| P5  | 12  | DRTL3321/P5/12 | TAPA DRCH DUCATI DRTL2100                     | 1    |
| P5  | 13  | DRTL3321/P5/13 | SOPORTE DUCATI DRTL2100                       | 1    |
| P5  | 14  | DRTL3321/P5/14 | PIÑON CADENA GRANDE DUCATI DRTL2100           | 1    |
| P5  | 15  | DRTL3321/P5/15 | TUERCA M8 DUCATI DRTL2100                     | 2    |




MOTOCULTOR DUCATI DRTL2100 REF: DRTL3321

 P6

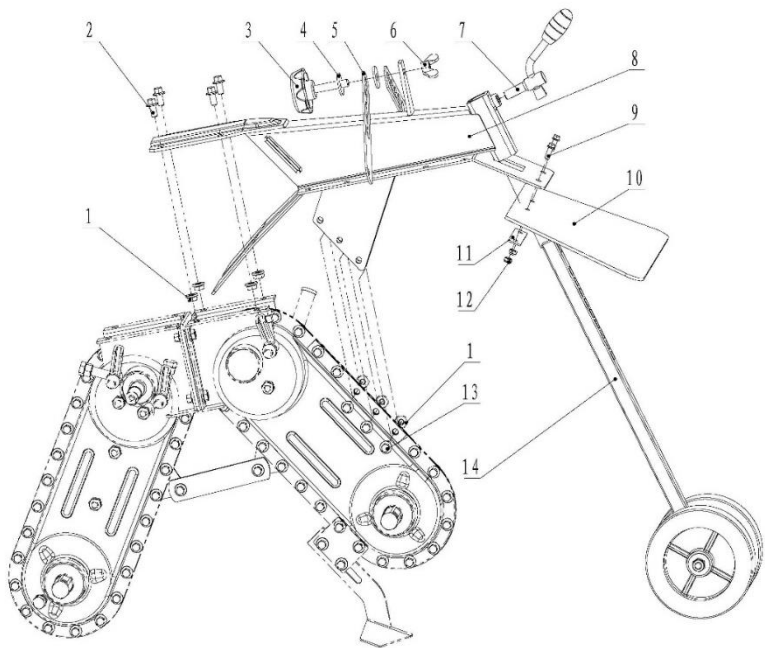


P7

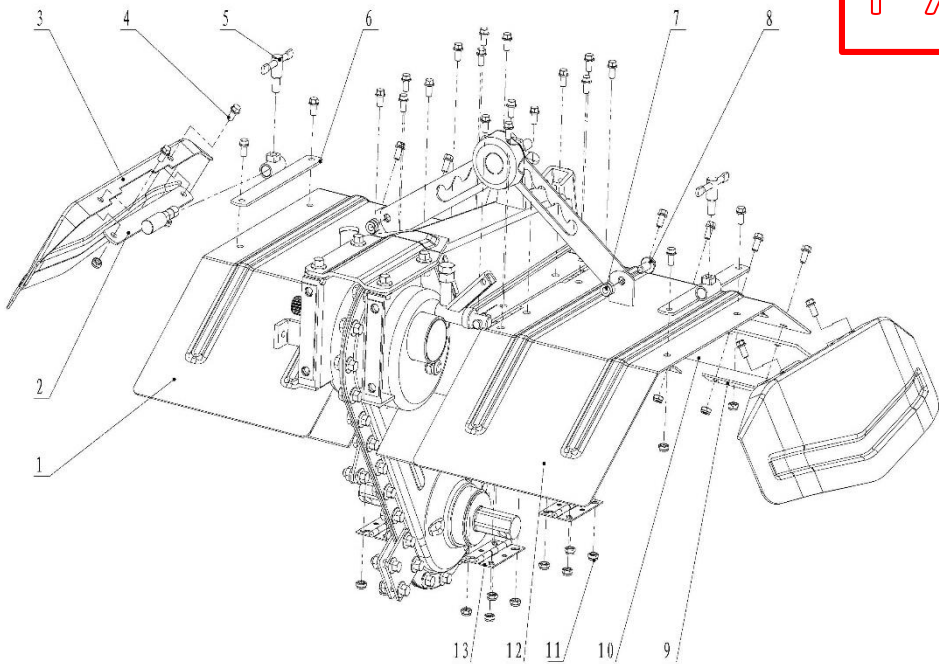 

| PAG | POS | REFERENCIAS    | DESCRIPCION                                  | CANT |
|-----|-----|----------------|----------------------------------------------|------|
| P6  | 1   | DRTL3321/P6/1  | TUERCA M8 DUCATI DRTL2100                    | 7    |
| P6  | 2   | DRTL3321/P6/2  | TORNILLO M8*16 DUCATI DRTL2100               | 4    |
| P6  | 3   | DRTL3321/P6/3  | POMO AJUSTE DUCATI DRTL2100                  | 1    |
| P6  | 4   | DRTL3321/P6/4  | ARANDELA DUCATI DRTL2100                     | 2    |
| P6  | 5   | DRTL3321/P6/5  | TOPE AJUSTE DUCATI DRTL2100                  | 2    |
| P6  | 6   | DRTL3321/P6/6  | TUERCA PALOMILLA M10 DUCATI DRTL2100         | 1    |
| P6  | 7   | DRTL3321/P6/7  | POMO APRIETE DUCATI DRTL2100                 | 1    |
| P6  | 8   | DRTL3321/P6/8  | BARRA RUEDA TRASERA DUCATI DRTL2100          | 1    |
| P6  | 9   | DRTL3321/P6/9  | TORNILLO M6*16 DUCATI DRTL2100               | 2    |
| P6  | 10  | DRTL3321/P6/10 | FALDILLA GOMA DUCATI DRTL2100                | 1    |
| P6  | 11  | DRTL3321/P6/11 | PLACA PRESION GOMA DUCATI DRTL2100           | 1    |
| P6  | 12  | DRTL3321/P6/12 | TUERCA M6 DUCATI DRTL2100                    | 2    |
| P6  | 13  | DRTL3321/P6/13 | TORNILLO M8*25 DUCATI DRTL2100               | 3    |
| P6  | 14  | DRTL3321/P6/14 | RUEDA TRASERA DUCATI DRTL2100                | 1    |
| PAG | POS | REFERENCIAS    | DESCRIPCION                                  | CANT |
| P7  | 1   | DRTL3321/P7/1  | GUARDABARRO DRCH DUCATI DRTL2100             | 1    |
| P7  | 2   | DRTL3321/P7/2  | SOPORTE GUARDABARROS DRCH DUCATI DRTL2100    | 2    |
| P7  | 3   | DRTL3321/P7/3  | ALETA GUARDABARRO DRCH DUCATI DRTL2100       | 2    |
| P7  | 4   | DRTL3321/P7/4  | TORNILLO M6*12 DUCATI DRTL2100               | 32   |
| P7  | 5   | DRTL3321/P7/5  | TORNILLO APRITE GUARDABARROS DUCATI DRTL2100 | 2    |
| P7  | 6   | DRTL3321/P7/6  | SOPORTE GUARDABARROS IZQ DUCATI DRTL2100     | 2    |
| P7  | 7   | DRTL3321/P7/7  | TUERCA M8 DUCATI DRTL2100                    | 2    |
| P7  | 8   | DRTL3321/P7/8  | TORNILLO M8*16 DUCATI DRTL2100               | 2    |
| P7  | 9   | DRTL3321/P7/9  | BARRA PRESION DUCATI DRTL2100                | 4    |
| P7  | 10  | DRTL3321/P7/10 | FALDILLA GOMA DUCATI DRTL2100                | 2    |
| P7  | 11  | DRTL3321/P7/11 | TUERCA M6 DUCATI DRTL2100                    | 32   |
| P7  | 12  | DRTL3321/P7/12 | GUARDABARROS IZQ DUCATI DRTL2100             | 1    |
| P7  | 13  | DRTL3321/P7/13 | BISAGRA DUCATI DRTL2100                      | 4    |



 
MOTOCULTOR DUCATI DRTL2100 REF: DRTL3321

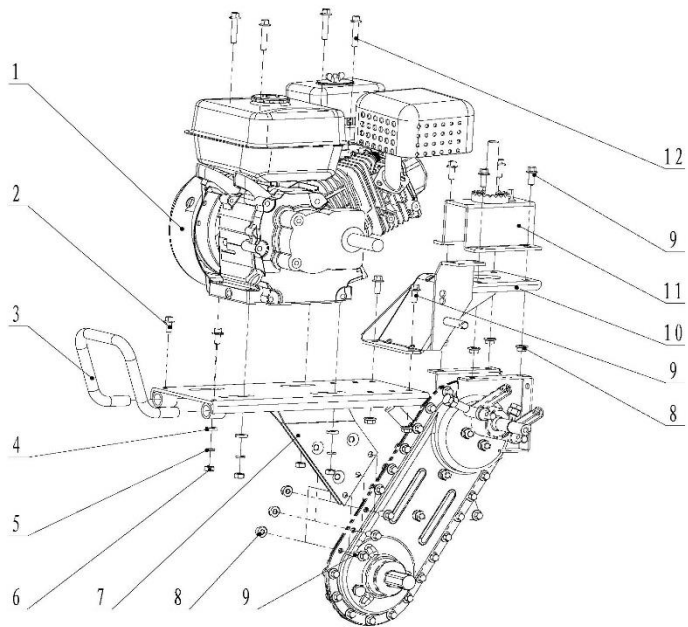


P8

| PAG | POS | REFERENCIAS    | DESCRIPCION                                | CANT |
|-----|-----|----------------|--------------------------------------------|------|
| P8  | 1   | DRTL3321/P8/1  | MOTOR COMPLETO DUCATI DRTL2100             | 1    |
| P8  | 2   | DRTL3321/P8/2  | TORNILLO M8*16 DUCATI DRTL2100             | 2    |
| P8  | 3   | DRTL3321/P8/3  | PARAGOLPES DUCATI DRTL2100                 | 1    |
| P8  | 4   | DRTL3321/P8/4  | ARANDELA DUCATI DRTL2100                   | 4    |
| P8  | 5   | DRTL3321/P8/5  | ARANDELA ELASTICA DUCATI DRTL2100          | 4    |
| P8  | 6   | DRTL3321/P8/6  | TUERCA M8 DUCATI DRTL2100                  | 4    |
| P8  | 7   | DRTL3321/P8/7  | SOPORTE MOTOR DUCATI DRTL2100              | 1    |
| P8  | 8   | DRTL3321/P8/8  | TUERCA M8 DUCATI DRTL2100                  | 3    |
| P8  | 9   | DRTL3321/P8/9  | TORNILLO M8*20 DUCATI DRTL2100             | 9    |
| P8  | 10  | DRTL3321/P8/10 | SOPORTE INFERIOR MANILLAR DUCATI DRTL2100  | 1    |
| P8  | 11  | DRTL3321/P8/11 | SOPORTE REGULABLE MANILLAR DUCATI DRTL2100 | 1    |
| P8  | 12  | DRTL3321/P8/12 | TORNILLO M8*40 DUCATI DRTL2100             | 4    |
| PAG | POS | REFERENCIAS    | DESCRIPCION                                | CANT |
| P9  | 1   | DRTL3321/P9/1  | MUELLE TENSION DUCATI DRTL2100             | 1    |
| P9  | 2   | DRTL3321/P9/2  | CLIP DUCATI DRTL2100                       | 1    |
| P9  | 3   | DRTL3321/P9/3  | PASADOR DUCATI DRTL2100                    | 6    |
| P9  | 4   | DRTL3321/P9/4  | PASADOR ALETA DUCATI DRTL2100              | 7    |
| P9  | 5   | DRTL3321/P9/5  | PALANCA CAMBIO DUCATI DRTL2100             | 3    |
| P9  | 6   | DRTL3321/P9/6  | RESORTE POLEA TENSORA DUCATI DRTL2100      | 1    |
| P9  | 7   | DRTL3321/P9/7  | PASADOR DUCATI DRTL2100                    | 1    |
| P9  | 8   | DRTL3321/P9/8  | ARANDELA DUCATI DRTL2100                   | 1    |
| P9  | 9   | DRTL3321/P9/9  | POLEA TENSORA COMPLETA DUCATI DRTL2100     | 1    |

 P9

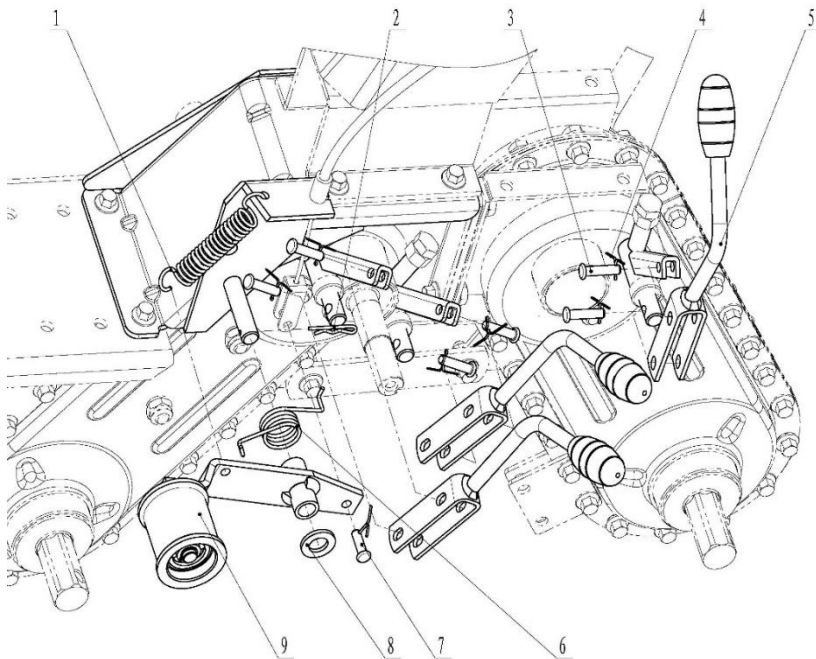


P10

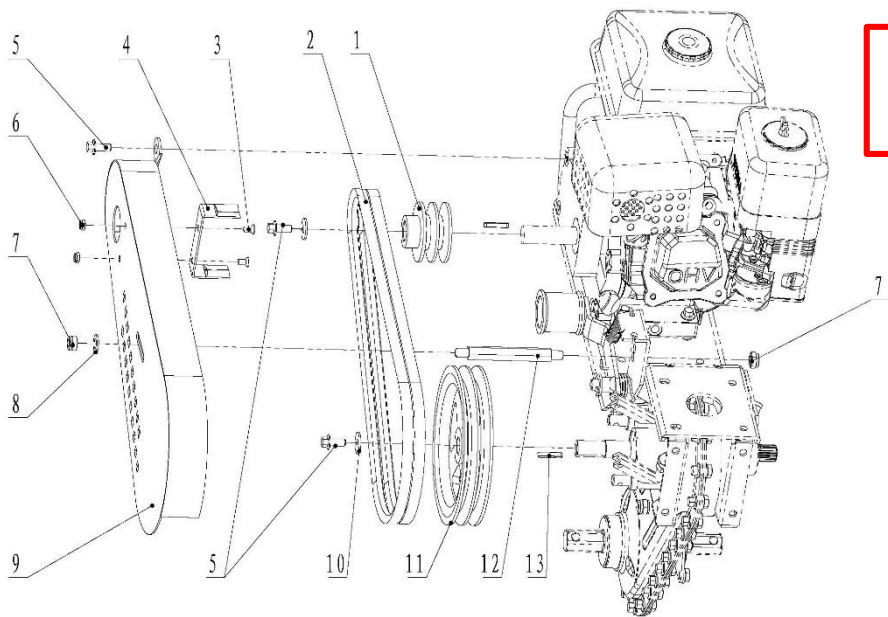 

| PAG | POS | REFERENCIAS     | DESCRIPCION                        | CANT |
|-----|-----|-----------------|------------------------------------|------|
| P10 | 1   | DRTL3321/P10/1  | POLEA MOTOR DUCATI DRTL2100        | 1    |
| P10 | 2   | DRTL3321/P10/2  | CORREA DUCATI DRTL2100             | 2    |
| P10 | 3   | DRTL3321/P10/3  | TORNILLO M6*12 DUCATI DRTL2100     | 2    |
| P10 | 4   | DRTL3321/P10/4  | LIMITADOR CORREA DUCATI DRTL2100   | 1    |
| P10 | 5   | DRTL3321/P10/5  | TORNILLO M8*20 DUCATI DRTL2100     | 3    |
| P10 | 6   | DRTL3321/P10/6  | TUERCA M6 DUCATI DRTL2100          | 2    |
| P10 | 7   | DRTL3321/P10/7  | TUERCA M10 DUCATI DRTL2100         | 2    |
| P10 | 8   | DRTL3321/P10/8  | ARANDELA 10 DUCATI DRTL2100        | 1    |
| P10 | 9   | DRTL3321/P10/9  | TAPA CORREA DUCATI DRTL2100        | 1    |
| P10 | 10  | DRTL3321/P10/10 | ARANDELA 8 DUCATI DRTL2100         | 2    |
| P10 | 11  | DRTL3321/P10/11 | POLEA MOTOR DUCATI DRTL2100        | 1    |
| P10 | 12  | DRTL3321/P10/12 | EJE SUJECCION TAPA DUCATI DRTL2100 | 1    |
| P10 | 13  | DRTL3321/P10/13 | CHAVETA DUCATI DRTL2100            | 2    |




## MOTOCULTOR DUCATI DRTL2100 REF: DRTL3321

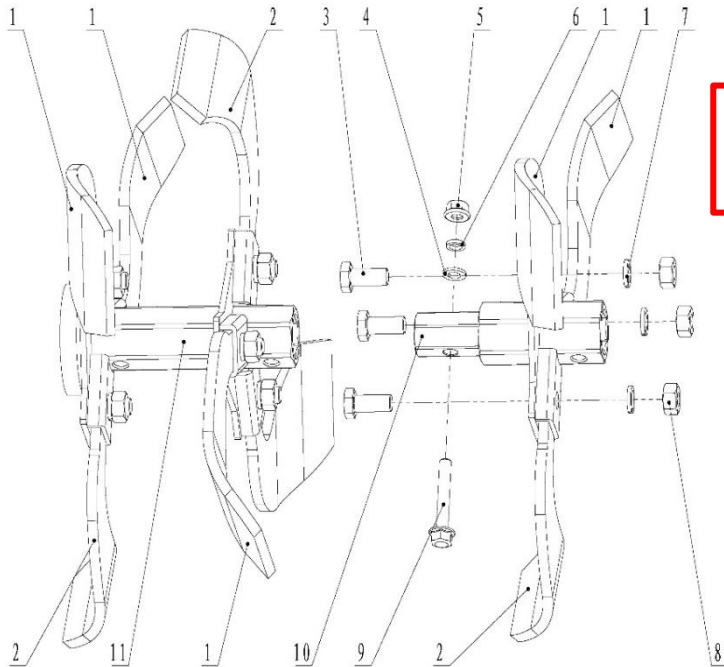 

P11



| PAG | POS | REFERENCIAS     | DESCRIPCION                               | CANT |
|-----|-----|-----------------|-------------------------------------------|------|
| P11 | 1   | DRTL3321/P11/1  | CUCHILLA DRCH DUCATI DRTL2100             | 6    |
| P11 | 2   | DRTL3321/P11/2  | CUCHILLA IZQ DUCATI DRTL2100              | 3    |
| P11 | 3   | DRTL3321/P11/3  | TORNILLO M10*25 DUCATI DRTL2100           | 9    |
| P11 | 4   | DRTL3321/P11/4  | ARANDELA 8 DUCATI DRTL2100                | 1    |
| P11 | 5   | DRTL3321/P11/5  | TUERCA 8 DUCATI DRTL2100                  | 1    |
| P11 | 6   | DRTL3321/P11/6  | ARANDELA ELASTICA 8 DUCATI DRTL2100       | 1    |
| P11 | 7   | DRTL3321/P11/7  | ARANDELA ELASTICA 10 DUCATI DRTL2100      | 9    |
| P11 | 8   | DRTL3321/P11/8  | TUERCA 10 DUCATI DRTL2100                 | 9    |
| P11 | 9   | DRTL3321/P11/9  | TORNILLO M8*40 DUCATI DRTL2100            | 9    |
| P11 | 10  | DRTL3321/P11/10 | SOPORTE CUCHILLA INTERIOR DUCATI DRTL2100 | 1    |
| P11 | 11  | DRTL3321/P11/11 | SOPORTE CUCHILLA EXTERIO DUCATI DRTL2100  | 1    |

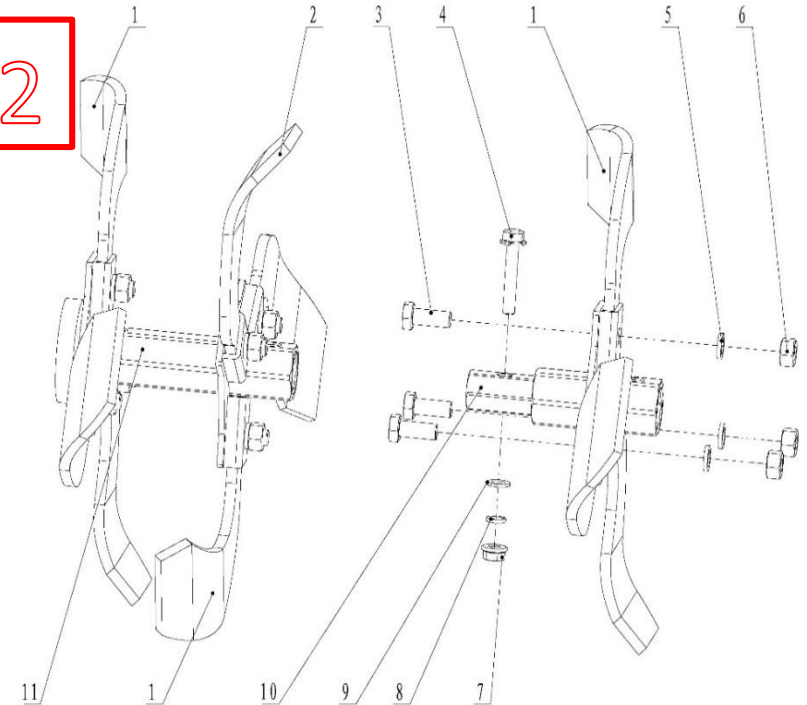 


P12

| PAG | POS | REFERENCIAS     | DESCRIPCION                               | CANT |
|-----|-----|-----------------|-------------------------------------------|------|
| P12 | 1   | DRTL3321/P12/1  | CUCHILLA DRCH DUCATI DRTL2100             | 3    |
| P12 | 2   | DRTL3321/P12/2  | CUHILLA IZQ DUCATI DRTL2100               | 6    |
| P12 | 3   | DRTL3321/P12/3  | TORNILLO M10*25 DUCATI DRTL2100           | 9    |
| P12 | 4   | DRTL3321/P12/4  | TORNILLO M*40 DUCATI DRTL2100             | 1    |
| P12 | 5   | DRTL3321/P12/5  | ARANDELA ELASTICA 10 DUCATI DRTL2100      | 9    |
| P12 | 6   | DRTL3321/P12/6  | TUERCA 10 DUCATI DRTL2100                 | 9    |
| P12 | 7   | DRTL3321/P12/7  | TUERCA 8 DUCATI DRTL2100                  | 1    |
| P12 | 8   | DRTL3321/P12/8  | ARANDELA ELASTICA 8 DUCATI DRTL2100       | 1    |
| P12 | 9   | DRTL3321/P12/9  | ARANDELA 8 DUCATI DRTL2100                | 1    |
| P12 | 10  | DRTL3321/P12/10 | SOPORTE CUCHILLA EXTERIO DUCATI DRTL2100  | 1    |
| P12 | 11  | DRTL3321/P12/11 | SOPORTE CUCHILLA INTERIOR DUCATI DRTL2100 | 1    |

  
P13

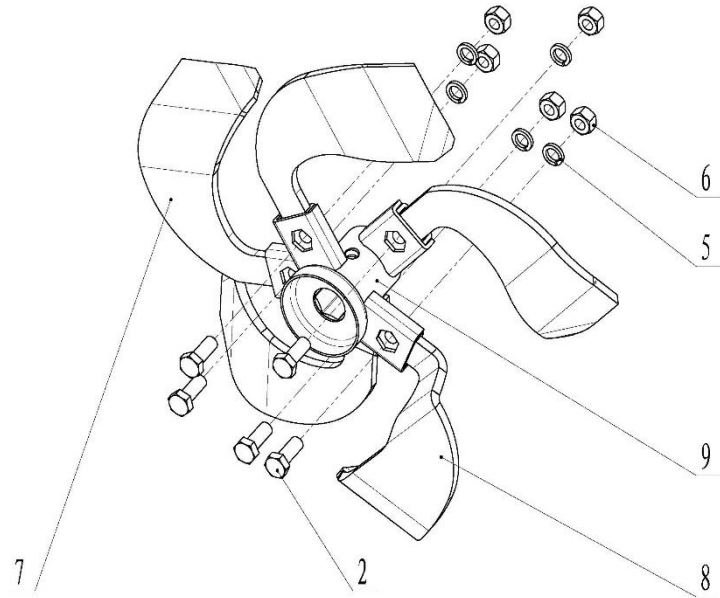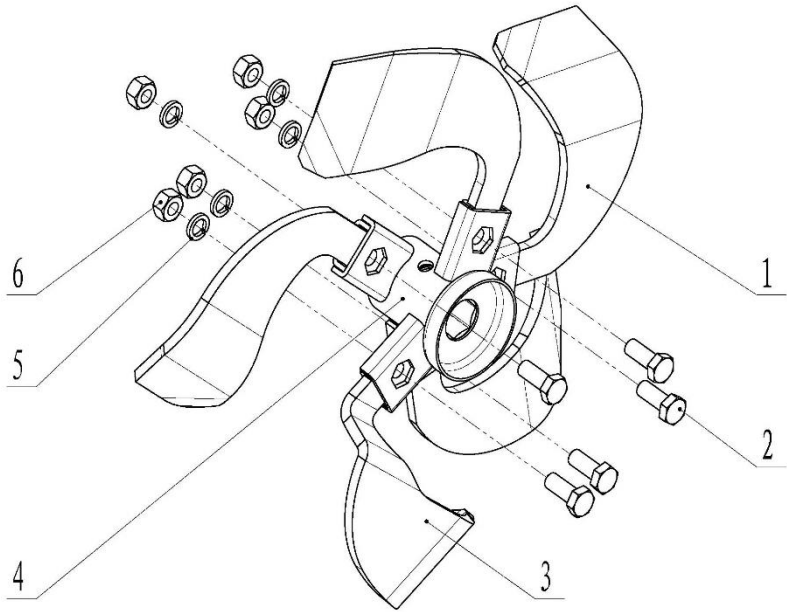


| PAG | POS | REFERENCIAS    | DESCRIPCION                                     | CANT |
|-----|-----|----------------|-------------------------------------------------|------|
| P13 | 1   | DRTL3321/P13/1 | CUCHILLA PLANA IZQ ABREZANJA DUCATI DRTL2100    | 4    |
| P13 | 2   | DRTL3321/P13/2 | TORNILLO M10*25 DUCATI DRTL2100                 | 10   |
| P13 | 3   | DRTL3321/P13/3 | CUCHILLA CURVA IZQ ABREZANJA DUCATI DRTL2100    | 1    |
| P13 | 4   | DRTL3321/P13/4 | SOPORTE CUCHILLA IZQ ABREZANJA DUCATI DRTL2100  | 1    |
| P13 | 5   | DRTL3321/P13/5 | ARANDELA ELASTICA 10 DUCATI DRTL2100            | 10   |
| P13 | 6   | DRTL3321/P13/6 | TUERCA M10 DUCATI DRTL2100                      | 10   |
| P13 | 7   | DRTL3321/P13/7 | CUCHILLA PLANA DRCH ABREZANJA DUCATI DRTL2100   | 4    |
| P13 | 8   | DRTL3321/P13/8 | CUCHILLA CURVA DRCH ABREZANJA DUCATI DRTL2100   | 1    |
| P13 | 9   | DRTL3321/P13/9 | SOPORTE CUCHILLA DRCH ABREZANJA DUCATI DRTL2100 | 1    |

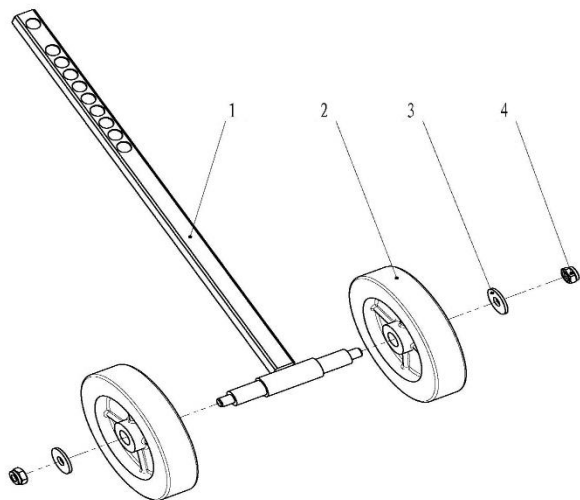 

P14

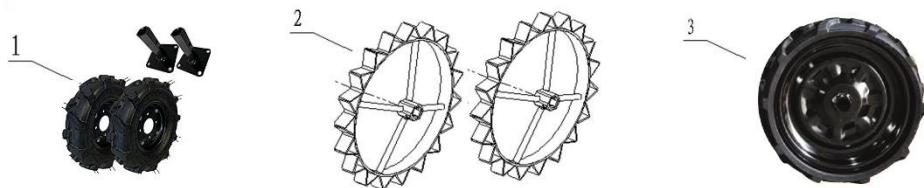 

P15

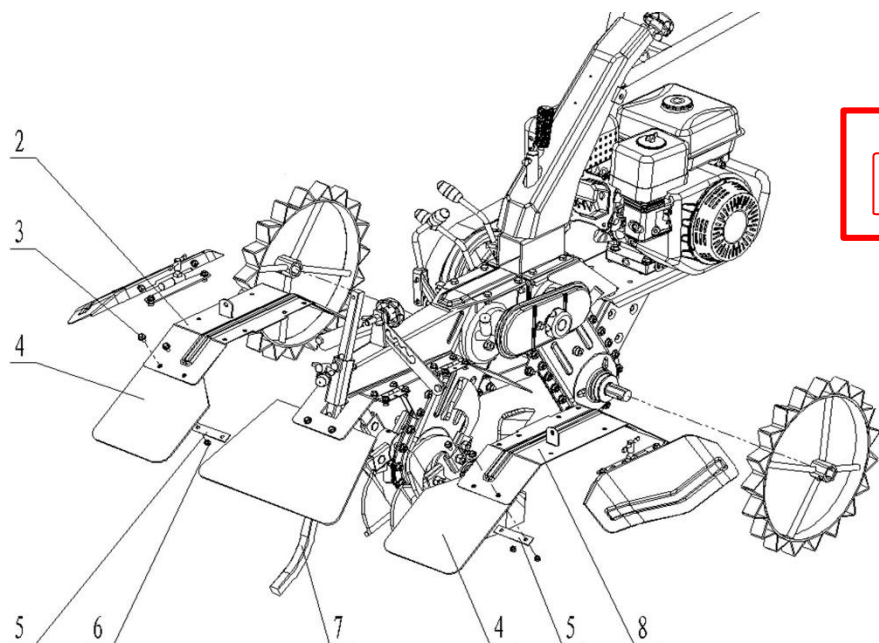 

P16

## MOTOCULTOR DUCATI DRTL2100 REF: DRTL3321

| PAG | POS | REFERNCIAS     | DESCRIPCION                    | CANT |
|-----|-----|----------------|--------------------------------|------|
| P14 | 1   | DRTL3321/P14/1 | SOPORTE RUEDAS DUCATI DRTL2100 | 1    |
| P14 | 2   | DRTL3321/P14/2 | RUEDA DUCATI DRTL2100          | 2    |
| P14 | 3   | DRTL3321/P14/3 | ARANDELA DUCATI DRTL2100       | 2    |
| P14 | 4   | DRTL3321/P14/4 | TUERCA M10 DUCATI DRTL2100     | 2    |

 
| PAG | POS | REFERNCIAS     | DESCRIPCION                                               | CANT |
|-----|-----|----------------|-----------------------------------------------------------|------|
| P15 | 1   | DRTL3321/P15/1 | RUEDA NEUMATICO DUCATI DRTL2100                           | 1    |
| P15 | 2   | DRTL3321/P15/2 | RUEDAS METALICAS DUCATI DRTL2100                          | 1    |
| P15 | 3   | DRTL3321/P15/3 | RUEDAS SOLIDAS(IZQ Y DRCH) MOTOCULTOR MULTIFUNCION DUCATI | 1    |

| PAG | POS | REFERNCIAS     | DESCRIPCION                                | CANT |
|-----|-----|----------------|--------------------------------------------|------|
| P16 | 2   | DRTL3321/P16/2 | GUARDABARROS IZQ ESTRECHO DUCATI DRTL2100  | 1    |
| P16 | 3   | DRTL3321/P16/3 | TORNILLO 6X12 DUCATI DRTL2100              | 4    |
| P16 | 4   | DRTL3321/P16/4 | FALDILLA GOMA DUCATI DRTL2100              | 2    |
| P16 | 5   | DRTL3321/P16/5 | CHAPA PRESION DUCATI DRTL2100              | 2    |
| P16 | 6   | DRTL3321/P16/6 | TUERCA FRENO 6 DUCATI DRTL2100             | 4    |
| P16 | 7   | DRTL3321/P16/7 | BARRA TIMON PROFUNDIDAD DUCATI DRTL2100    | 1    |
| P16 | 8   | DRTL3321/P16/8 | GUARDABARROS DRCH ESTRECHO DUCATI DRTL2100 | 1    |




# MOTOR 7HP DTL7000 REF: DRTL2100

P1

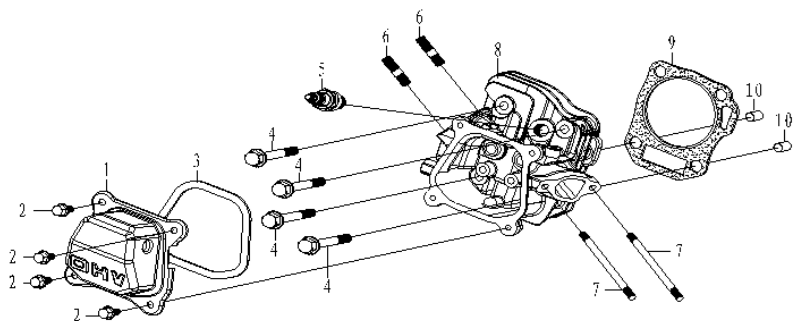

| PAG | POS | REFERENCIA       | DESCRIPCION                         | CANT |
|-----|-----|------------------|-------------------------------------|------|
| P1  | 1   | DTL287000M/P1/1  | TAPA VALVULAS DTL7000/9000          | 1    |
| P1  | 2   | DTL287000M/P1/2  | TORNILLO M6X16 DTL7000/9000         | 4    |
| P1  | 3   | DTL287000M/P1/3  | JUNTA TAPA VALVULAS DTL7000/9000    | 1    |
| P1  | 4   | DTL287000M/P1/4  | TORNILLO M8X60 DTL7000/9000         | 4    |
| P1  | 5   | DTL287000M/P1/5  | BUJIA DTL7000/9000                  | 1    |
| P1  | 6   | DTL287000M/P1/6  | ESPARRAGO M8X35 DTL7000/9000        | 1    |
| P1  | 7   | DTL287000M/P1/7  | ESPARRAGO M6X113 DTL7000/9000       | 1    |
| P1  | 8   | DTL287000M/P1/8  | CULATA DTL7000/9000                 | 1    |
| P1  | 9   | DTL287000M/P1/9  | JUNTA CULATA DTL7000/9000           | 1    |
| P1  | 10  | DTL287000M/P1/10 | CASQUILLO CULATA 10X16 DTL7000/9000 | 2    |

 P2

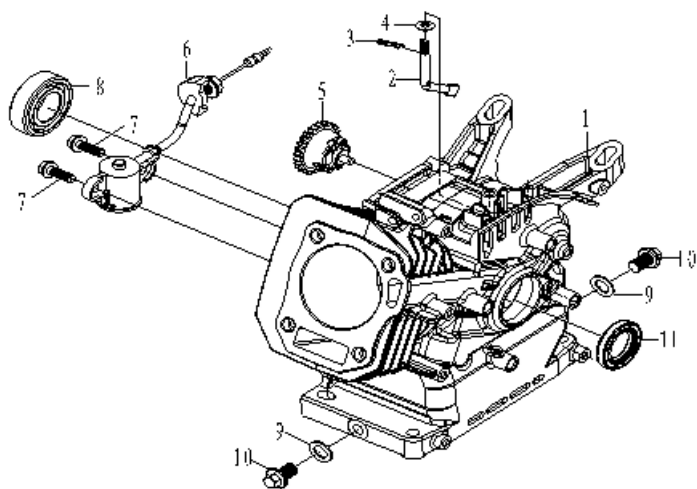


| PAG | POS | REFERENCIA       | DESCRIPCION                         | CANT |
|-----|-----|------------------|-------------------------------------|------|
| P2  | 1   | DTL287000M/P2/1  | CILINDRO DTL7000/9000               | 1    |
| P2  | 2   | DTL287000M/P2/2  | VARILLA REGULADORA DTL7000/9000     | 1    |
| P2  | 3   | DTL287000M/P2/3  | CLIP VARILLA DTL7000/9000           | 1    |
| P2  | 4   | DTL287000M/P2/4  | ARANDELA 6X13X1 DTL7000/9000        | 1    |
| P2  | 5   | DTL287000M/P2/5  | REGULADOR GAS DTL7000/9000          | 1    |
| P2  | 6   | DTL287000M/P2/6  | ALARMA NIVEL DTL7000/9000           | 1    |
| P2  | 7   | DTL287000M/P2/7  | TORNILLO M6X16 DTL7000/9000         | 2    |
| P2  | 8   | DTL287000M/P2/8  | RODAMIENTO CIGÜEÑAL DTL7000/9000    | 1    |
| P2  | 9   | DTL287000M/P2/9  | ARANDELA TAPON VACIADO DTL7000/9000 | 2    |
| P2  | 10  | DTL287000M/P2/10 | TAPON VACIADO CARTER DTL7000/9000   | 2    |
| P2  | 11  | DTL287000M/P2/11 | RETEN CIGÜEÑAL DTL7000/9000         | 1    |




## MOTOR 7HP DTL7000 REF: DRTL2100

 P3

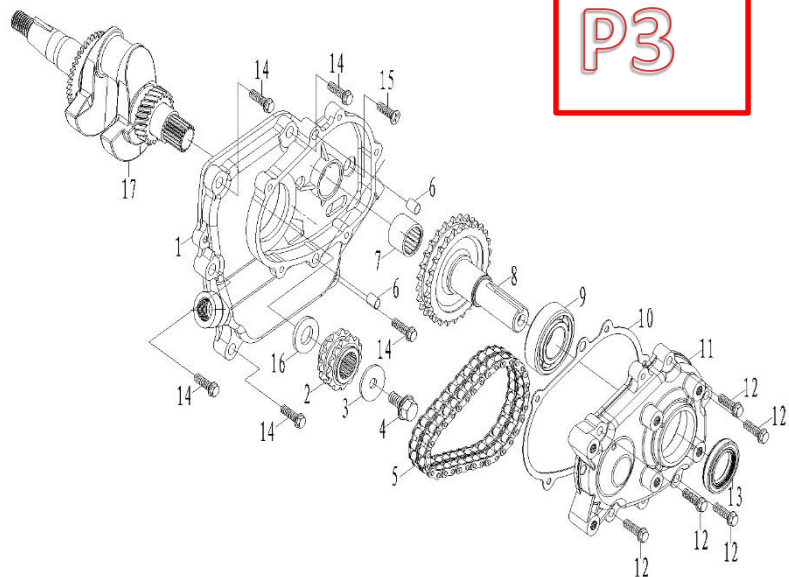

| PAG | POS | REFERENCIA       | DESCRIPCION                              | CANT |
|-----|-----|------------------|------------------------------------------|------|
| P3  | 1   | DRTL3321M/P3/1   | TAPA CARTER REDUCTORA DRTL2100           | 1    |
| P3  | 2   | DRTL3321M/P3/2   | PIÑON SALIDA CIGÜEÑAL DRTL2100           | 1    |
| P3  | 3   | DRTL3321M/P3/3   | ARANDELA 8X28X3 DRTL2100                 | 1    |
| P3  | 4   | DRTL3321M/P3/4   | TORNILLO 8X30 DRTL2100                   | 1    |
| P3  | 5   | DRTL3321M/P3/5   | CADENA REDUCTORA DRTL2100                | 1    |
| P3  | 6   | DTL287000M/P3/11 | CASQUILLO TAPA CARTER DTL 7000M/DRTL2100 | 2    |
| P3  | 7   | DRTL3321M/P3/7   | JAULA AGUJAS DRTL2100                    | 1    |
| P3  | 8   | DRTL3321M/P3/8   | EJE SALIDA REDUCTORA DRTL2100            | 1    |
| P3  | 9   | DTL287000M/P2/8  | RODAMIENTO CIGÜEÑAL DTL 7000M DRTL2100   | 1    |
| P3  | 10  | DRTL3321M/P3/10  | JUNTA REDUCTORA DRTL2100                 | 1    |
| P3  | 11  | DRTL3321M/P3/11  | TAPA REDUCTORA DRTL2100                  | 1    |
| P3  | 12  | DTL287000M/P11/4 | TORNILLO M6X22 DTL 7000M/DRTL2100        | 5    |
| P3  | 13  | DTL287000M/P2/11 | RETEN CIGÜEÑAL DTL 7000M/DRTL2100        | 1    |
| P3  | 14  | DTL287000M/P3/5  | TORNILLO M8X32 DTL 7000M/DRTL2100        | 5    |
| P3  | 15  | DRTL3321M/P3/15  | TORNILLO 8X25 DRTL2100                   | 1    |
| P3  | 16  | DRTL3321M/P3/16  | ARANDELA 20.5X39X3 DRTL2100              | 1    |
| P3  | 17  | DRTL3321M/P3/17  | CIGÜEÑAL ESTRIADO DRTL2100               | 1    |

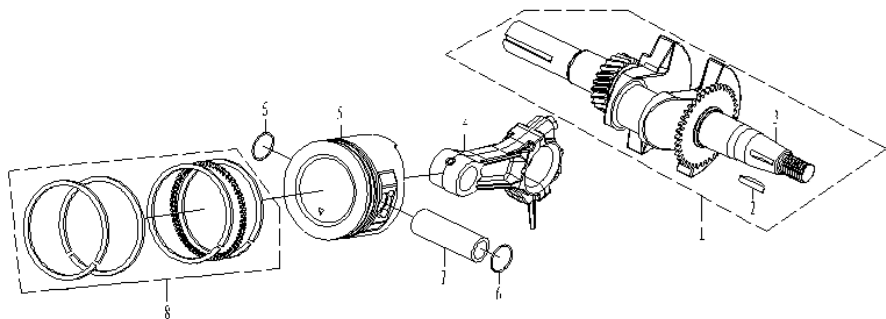 


P4

| PAG | POS | REFERENCIA      | DESCRIPCION                   | CANT |
|-----|-----|-----------------|-------------------------------|------|
| P4  | 1   | PAGINA 3 POS 17 |                               | 1    |
| P4  | 2   | DTL287000M/P4/2 | CHAVETA CIGÜEÑAL DTL7000/9000 | 1    |
| P4  | 3   | DTL287000M/P4/3 | CIGÜEÑAL DTL7000/9000         | 1    |
| P4  | 4   | DTL287000M/P4/4 | BIELA DTL7000/9000            | 1    |
| P4  | 5   | DTL287000M/P4/5 | PISTON DTL7000/9000           | 1    |
| P4  | 6   | DTL287000M/P4/6 | CLIP BULON DTL7000/9000       | 2    |
| P4  | 7   | DTL287000M/P4/7 | BULON PISTON DTL7000/9000     | 1    |
| P4  | 8   | DTL287000M/P4/8 | KIT SEGMENTOS DTL7000/9000    | 1    |




## MOTOR 7HP DTL7000 REF: DRTL2100

 P5

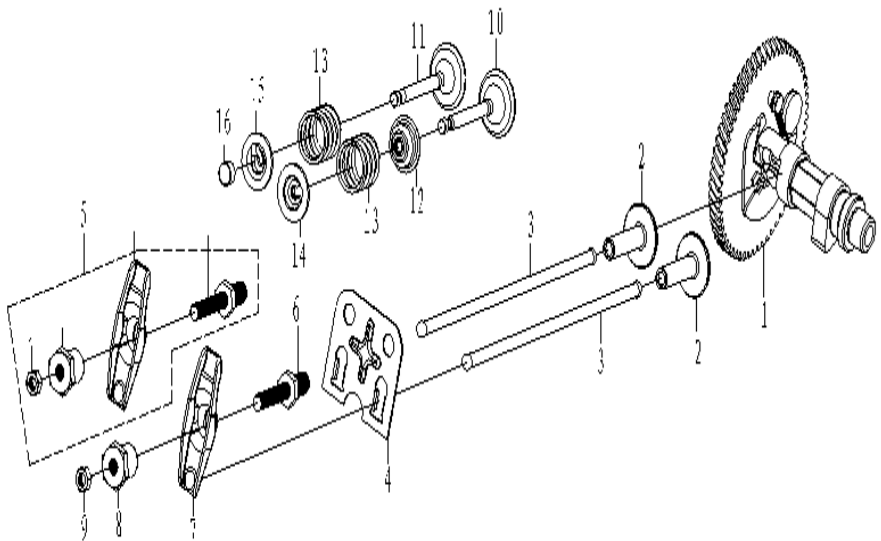

| PAG | POS | REFERENCIA       | DESCRIPCION                           | CANT |
|-----|-----|------------------|---------------------------------------|------|
| P5  | 1   | DTL287000M/P5/1  | ARBOL DE LEVAS                        | 1    |
| P5  | 2   | DTL287000M/P5/2  | TAQUE DTL7000/9000                    | 1    |
| P5  | 3   | DTL287000M/P5/3  | VARILLA VALVULA DTL7000/9000          | 2    |
| P5  | 4   | DTL287000M/P5/4  | CHAPA GUIA DTL7000/9000               | 1    |
| P5  | 5   | DTL287000M/P5/5  | BALANCINES KIT DTL7000/9000           | 2    |
| P5  | 10  | DTL287000M/P5/10 | VALVULA ADMISION DTL7000/9000         | 1    |
| P5  | 11  | DTL287000M/P5/11 | VALVULA ESCAPE DTL7000/9000           | 1    |
| P5  | 12  | DTL287000M/P5/12 | RETEN VALVULA DTL7000/9000            | 1    |
| P5  | 13  | DTL287000M/P5/13 | MUELLE VALVULA DTL7000/9000           | 2    |
| P5  | 14  | DTL287000M/P5/14 | PLATILLO ADMISION DTL7000/9000        | 1    |
| P5  | 15  | DTL287000M/P5/15 | PLATILLO ESCAPE DTL7000/9000          | 1    |
| P5  | 16  | DTL287000M/P5/16 | CASQUILLO VALVULA ESCAPE DTL7000/9000 | 1    |

 P6

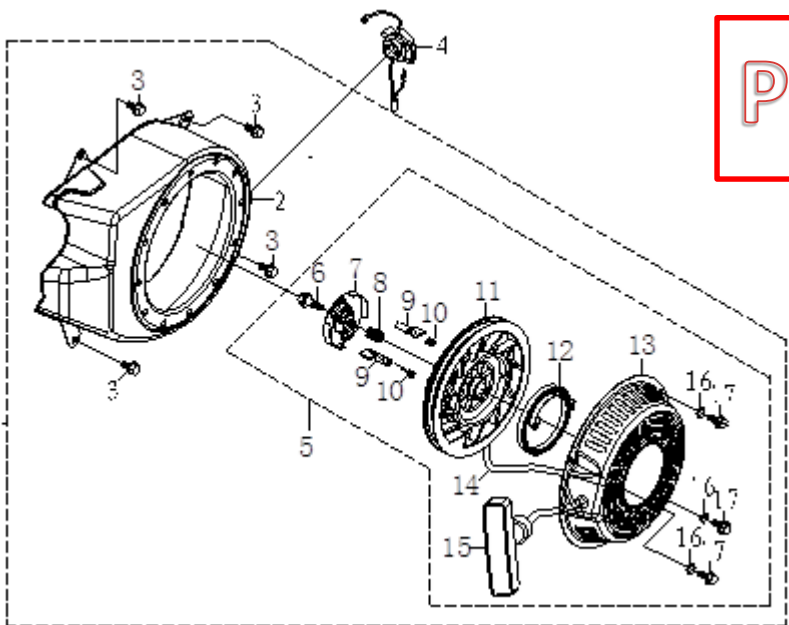


| PAG | POS | REFERENCIA        | DESCRIPCION                            | CANT |
|-----|-----|-------------------|----------------------------------------|------|
| P6  | 2   | DTL287000M/P6/2   | CARCASA AIREACION DTL7000/9000         | 1    |
| P6  | 3   | DTL287000M/P6/3   | TORNILLO M6X12 DTL7000/9000            | 4    |
| P6  | 4   | DGR364500M/P5/4-1 | TAPA INTERRUPTOR DTL7000/9000          | 1    |
| P6  | 5   | DTL287000M/P6/5   | ARRANCADOR COMPLETO DTL7000/9000       | 1    |
| P6  | 6   | DTL287000M/P6/6   | TORNILLO CENTRAL DTL7000/9000          | 1    |
| P6  | 7   | DTL287000M/P6/7   | CAZOLETA DTL7000/9000                  | 1    |
| P6  | 8   | DTL287000M/P6/8   | MUELLE CAZOLETA DTL7000/9000           | 1    |
| P6  | 9   | DTL287000M/P6/9   | TRINQUETE DTL7000/9000                 | 2    |
| P6  | 10  | DTL287000M/P6/10  | MUELLE TRINQUETE DTL7000/9000          | 2    |
| P6  | 11  | DTL287000M/P6/11  | POLEA ARRANCADOR DTL7000/9000          | 1    |
| P6  | 12  | DTL287000M/P6/12  | MUELLE ARRANCADOR DTL7000/9000         | 1    |
| P6  | 13  | DTL287000M/P6/13  | CARCASA ARRANCADOR DTL7000/9000        | 1    |
| P6  | 14  | DTL287000M/P6/14  | CUERDA ARRANCADOR DTL7000/9000         | 1    |
| P6  | 15  | DTL287000M/P6/15  | POMO ARRANCADOR DTL7000/9000           | 1    |
| P6  | 16  | DTL287000M/P6/16  | ARANDELA ARRANCADOR DTL7000/9000       | 3    |
| P6  | 17  | DTL287000M/P6/17  | TORNILLO ARRANCADOR M6X10 DTL7000/9000 | 3    |




## MOTOR 7HP DTL7000 REF: DRTL2100

 P7

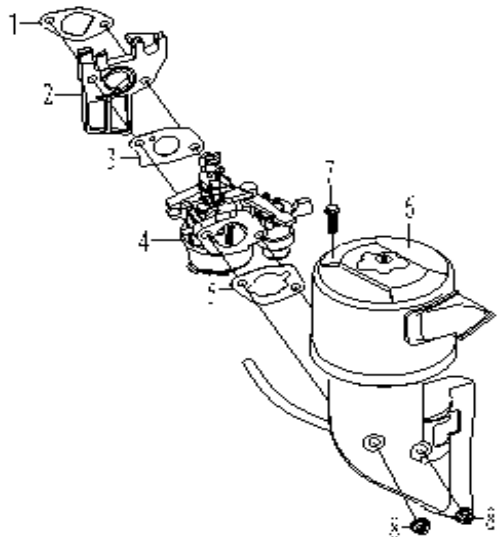

| PAG | POS | REFERENCIA      | DESCRIPCION                               | CANT |
|-----|-----|-----------------|-------------------------------------------|------|
| P7  | 1   | DTL287000M/P7/1 | JUNTA ADMISION DTL7000/9000               | 1    |
| P7  | 2   | DTL287000M/P7/2 | SEPARADOR TERMICO DTL7000/9000            | 1    |
| P7  | 3   | DTL287000M/P7/3 | JUNTA CARBURADOR DTL7000/9000             | 1    |
| P7  | 4   | DTL287000M/P7/4 | CARBURADOR DTL7000/9000                   | 1    |
| P7  | 5   | DTL287000M/P7/5 | JUNTA FILTRO DE AIRE DTL7000/9000         | 1    |
| P7  | 6   | DTL287000M/P7/6 | ANCLAJE FILTRO AIRE COMPLETO DTL7000/9000 | 1    |
| P7  | 7   | DTL287000M/P7/7 | TORNILLO M6X22 DTL7000/9000               | 1    |
| P7  | 8   | DTL287000M/P7/8 | TUERCA M6 DTL7000/9000                    | 2    |

 P8

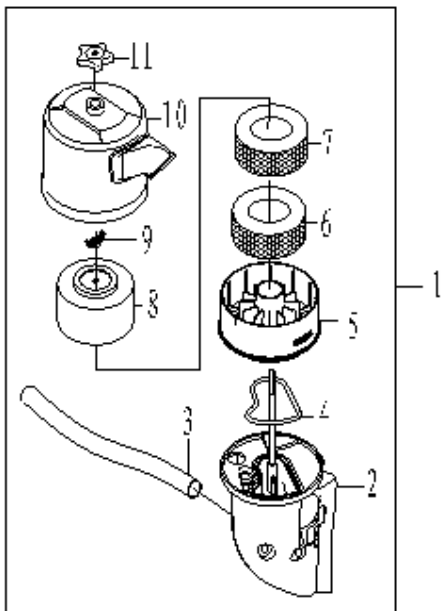


| PAG | POS | REFERENCIA       | DESCRIPCION                               | CANT |
|-----|-----|------------------|-------------------------------------------|------|
| P8  | 1   | DTL287000M/P7/6  | ANCLAJE FILTRO AIRE COMPLETO DTL7000/9000 | 1    |
| P8  | 2   | DTL287000M/P8/2  | SOPORTE FILTRO DE AIRE DTL7000/9000       | 1    |
| P8  | 3   | DTL287000M/P8/3  | TUBO RESPIRADERO DTL7000/9000             | 1    |
| P8  | 4   | DTL287000M/P8/4  | JUNTA VASO ACEITE DTL7000/9000            | 1    |
| P8  | 5   | DTL287000M/P8/5  | VASO ACEITE DTL7000/9000                  | 1    |
| P8  | 6   | DTL287000M/P8/6  | ELEMENTO FILTRO 1 DTL7000/9000            | 1    |
| P8  | 7   | DTL287000M/P8/7  | ELEMENTO FILTRO 2 DTL7000/9000            | 1    |
| P8  | 8   | DTL287000M/P8/8  | TAPA ELEMENTOS DTL7000/9000               | 1    |
| P8  | 9   | DTL287000M/P8/9  | TUERCA MARIPOSA DTL7000/9000              | 1    |
| P8  | 10  | DTL287000M/P8/10 | TAPA FILTRO DE AIRE DTL7000/9000          | 1    |
| P8  | 11  | DTL287000M/P8/11 | TUERCA MULETILLA DTL7000/9000             | 1    |




P10

## MOTOR 7HP DTL7000 REF: DRTL2100

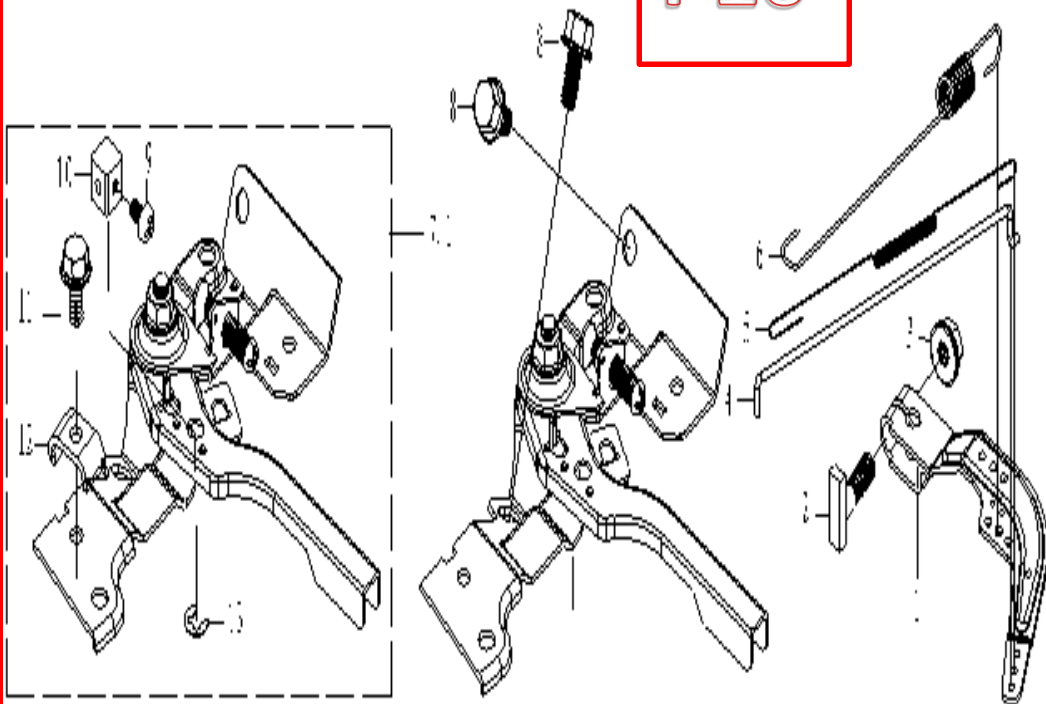 

| PAG | POS | REFERENCIA         | DESCRIPCION                                      | CANT |
|-----|-----|--------------------|--------------------------------------------------|------|
| P10 | 1   | DTL287000M/P10/1   | PALANCA EXTERIOR REGULADOR DTL7000/9000          | 1    |
| P10 | 2   | DTL287000M/P10/2   | TORNILLO PALANCA REGULADOR DTL7000/9000          | 1    |
| P10 | 3   | DTL287000M/P10/3   | TUERCA M6 DTL7000/9000                           | 1    |
| P10 | 4   | DTL287000M/P10/4   | VARILLA ACELERADOR DTL7000/9000                  | 1    |
| P10 | 5   | DTL287000M/P10/5   | MUELLE RETORNO GAS DTL7000/9000                  | 1    |
| P10 | 6   | DTL287000M/P10/6   | MUELLE REGULADOR DTL7000/9000                    | 1    |
| P10 | 7.1 | DTL287000M/P10/7.1 | MANDO ACELERADOR COMPLETO SOP.SIRGA DTL7000/9000 | 1    |
| P10 | 8   | DTL287000M/P10/8   | TORNILLO M6X12 DTL7000/9000                      | 2    |
| P10 | 9   | DTL287000M/P10/9   | TORNILLO M4X6 DTL7000/9000                       | 1    |
| P10 | 10  | DTL287000M/P10/10  | PRISIONERO CABLE GAS DTL7000/9000                | 1    |
| P10 | 11  | DTL287000M/P10/11  | TORNILLO BRIDA DTL7000/9000                      | 1    |
| P10 | 12  | DTL287000M/P10/12  | BRIDA SUJETA CABLE DTL7000/9000                  | 1    |
| P10 | 13  | DTL287000M/P10/13  | GRUPILLA DTL7000/9000                            | 1    |

 P11

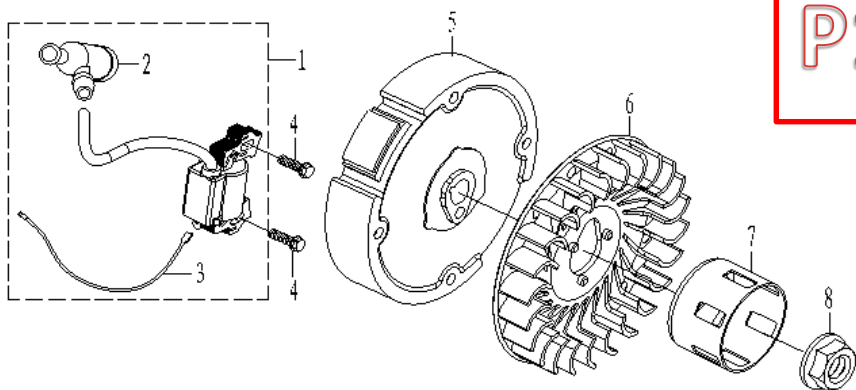


| PAG | POS   | REFERENCIA       | DESCRIPCION                     | CANT |
|-----|-------|------------------|---------------------------------|------|
| P11 | 1-2-3 | DTL287000M/P11/1 | BOBINA DE ARRANQUE DTL7000/9000 | 1    |
| P11 | 2     | DTL287000M/P11/2 | PIPA BUJIA DTL7000/9000         | 1    |
| P11 | 4     | DTL287000M/P11/4 | TORNILLO M6X22 DTL7000/9000     | 1    |
| P11 | 5     | DTL287000M/P11/5 | VOLANTE DTL7000/9000            | 1    |
| P11 | 6     | DTL287000M/P11/6 | VENTILADOR DTL7000/9000         | 1    |
| P11 | 7     | DTL287000M/P11/7 | POLEA ARRANQUE DTL7000/9000     | 1    |
| P11 | 8     | DTL287000M/P11/8 | TUERCA VOLANTE DTL7000/9000     | 1    |




## MOTOR 7HP DTL7000 REF: DRTL2100

 P12

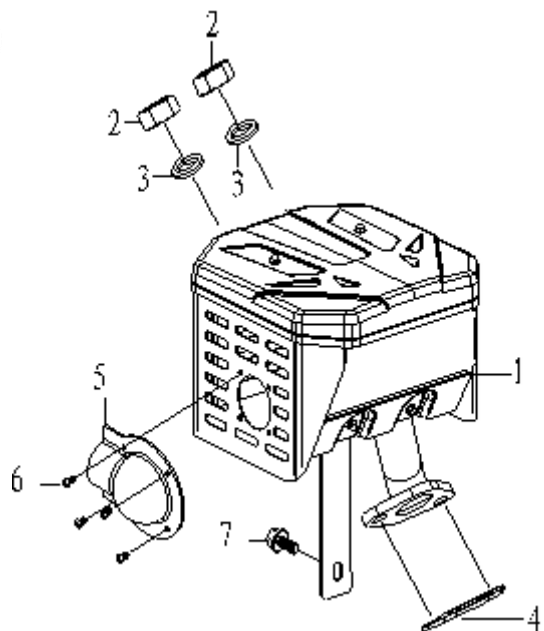

| PAG | POS | REFERENCIA       | DESCRIPCION                      | CANT |
|-----|-----|------------------|----------------------------------|------|
| P12 | 1   | DTL287000M/P12/1 | SILENCIOSO COMPLETO DTL7000/9000 | 1    |
| P12 | 2   | DTL287000M/P12/2 | TUERCA M8 DTL7000/9000           | 2    |
| P12 | 3   | DTL287000M/P12/3 | ARANDELA ELASTICA 8 DTL7000/9000 | 2    |
| P12 | 4   | DTL287000M/P12/4 | JUNTA SILENCIOSO DTL7000/9000    | 1    |
| P12 | 5   | DTL287000M/P12/5 | DEFLECTOR DTL7000/9000           | 1    |
| P12 | 6   | DTL287000M/P12/6 | TORNILLO 4,2X5 DTL7000/9000      | 4    |
| P12 | 7   | DTL287000M/P12/7 | TORNILLO M6X12 DTL7000/9000      | 1    |

 
P13

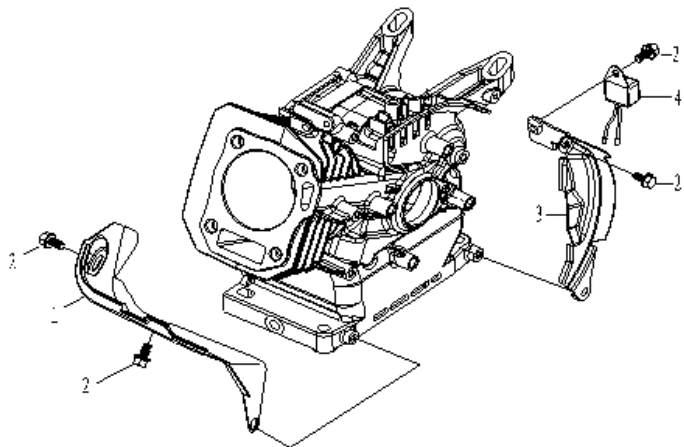

| PAG | POS | REFERENCIA       | DESCRIPCION                            | CANT |
|-----|-----|------------------|----------------------------------------|------|
| P13 | 1   | DTL287000M/P13/1 | CHAPA VENTILACION CULATA DTL7000/9000  | 1    |
| P13 | 2   | DTL287000M/P13/2 | TORNILLO M6X12 DTL7000/9000            | 1    |
| P13 | 3   | DTL287000M/P13/3 | CHAPA VENTILACION VOLANTE DTL7000/9000 | 1    |
| P13 | 4   | DTL287000M/P13/4 | DIODO DTL7000/9000                     | 1    |



 MOTOR 7HP DTL7000 REF: DRTL2100

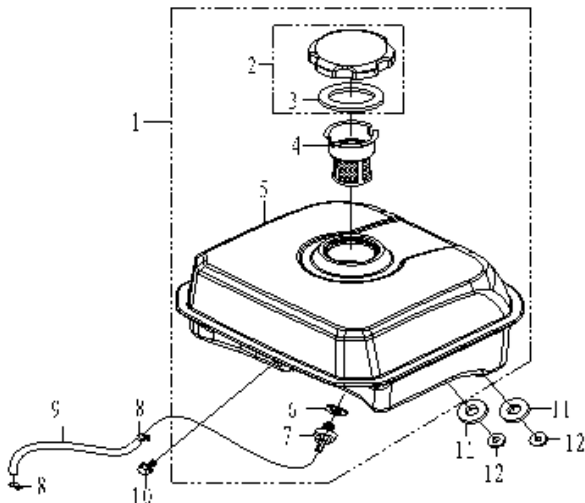

P14

| PAG | POS | REFERENCIA        | DESCRIPCION                             | CANT |
|-----|-----|-------------------|-----------------------------------------|------|
| P14 | 1   | DTL287000M/P14/1  | DEPOSITO GASOLINA COMPLETO DTL7000/9000 | 1    |
| P14 | 2-3 | DTL287000M/P14/2  | TAPON DEPOSITO COMPLETO DTL7000/9000    | 1    |
| P14 | 4   | DTL287000M/P14/4  | FILTRO LLENADO DTL7000/9000             | 1    |
| P14 | 5   | DTL287000M/P14/5  | DEPOSITO GASOLINA DTL7000/9000          | 1    |
| P14 | 6   | DTL287000M/P14/6  | ARANDELA FILTRO GASOLINA DTL7000/9000   | 1    |
| P14 | 7   | DTL287000M/P14/7  | FILTRO GASOLINA DTL7000/9000            | 1    |
| P14 | 8   | DTL287000M/P14/8  | CLIP TUBO DTL7000/9000                  | 2    |
| P14 | 9   | DTL287000M/P14/9  | TUBO GASOLINA DTL7000/9000              | 1    |
| P14 | 10  | DTL287000M/P14/10 | TORNILLO M6X25 DTL7000/9000             | 1    |
| P14 | 11  | DTL287000M/P14/11 | ARANDELA DTL7000/9000                   | 2    |
| P14 | 12  | DTL287000M/P14/12 | TUERCA M6 DTL7000/9000                  | 2    |